



PARTS GATALOG

SHERP ATV
Parts catalog

ed. A1.01 (September 8, 2017)

 
CONTENT

Transmission (03.0000)	5
Steering friction mechanism (03.3000)	9
Doors and windows installation (04.0000)	14
Front door (04.2100)	17
Front window assembly (04.3100)	19
Rear window assembly (05.4200)	21
Back door (04.1000)	23
Seats and shelves Installation (06.0000)	25
Body components installation (05.0000)	27
Cabin Panels (05.6000)	29
Power unit (10.1100)	31
Power unit installation (10.1000)	34
Brake system (07.0000)	35
Wheel assembly (08.1000)	36
Wheel installation (08.0000)	37
Interior panels assembling (06.7000)	38

CONTENT

Air system (10.3000)	40
Cooling system (10.2000)	42
Transmission control drive (09.2000)	44
Fuel pump control drive (09.4000)	46
Control gear of slewing mechanism (09.1000)	48
Control arms of slewing mechanism (09.1100)	52
Clutch control actuator (09.3000)	55
Exhaust system (10.4000)	58
Fuel system (10.5000)	60
Lubricating chain system (12.5000)	62
Air heater installation (12.2000)	64
Electrical equipment (11.0000)	67
Mounting box (11.0110)	71
Mimic panel installation (05.3400)	74

TRANSMISSION (03.0000)

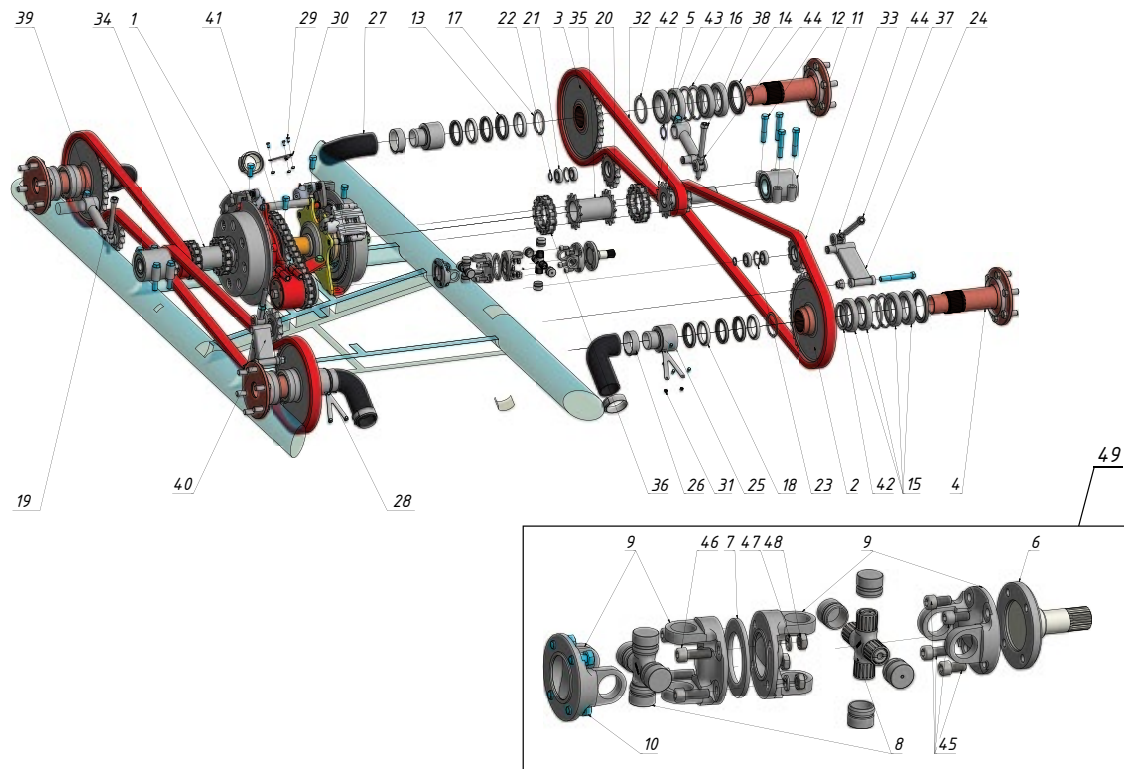

TRANSMISSION (03.0000)


ITEM	PART CODE	DESCRIPTION
1	03.0001	FRICTION GEAR SYSTEM
2	03.0247	FRONT SPROCKET Z 39
3	03.0249	BACK SPROCKET Z39
4	03.0251	WHEEL HUB
5	03.0258	DRIVE SHAFT
6	03.0466	CARDAN SHAFT
7	03.0274	BOOST
8	03.0286	U-JOINT
9	03.0285	DRIVE SHAFT FLANGE
10	03.0280	DRIVE SHAFT BOLT
11	03.0472	BEARING SUPPORT
12	03.0442	BEARING SUPPORT BOLT
13	03.0433	ADAPTER CUP
14	03.0434	WHEEL HUB CUP
15	03.0437	HUB BEARING
16	03.0432	HUB RETAINING RING
17	03.0431	ADAPTER RETAINING RING
18	03.0435	ADAPTER BEARING
19	03.0301	REAR TENSIONER LEVER
20	03.0295	TENSIONER SPROCKET

ITEM	PART CODE	DESCRIPTION
21	03.0315	TENSIONER SPROCKET BEARING
22	03.0316	TENSIONER RETAINING RING
23	03.0317	TENSIONER RETAINING RING
24	03.0349	FRONT TENSIONER LEVER
25	03.0386	HUB ADAPTER
26	03.0458	FITTING PIPE CLAMP
27	03.0428	TIRE INFLATION FITTING PIPE
28	03.0422	ADAPTER BRACKET
29	03.0439	BRACKET BOLT
30	03.0450	WASHER
31	03.0447	NUT
32	03.0459	BACK SPROCKET CHAIN
33	03.0460	FRONT SPROCKET CHAIN
34	03.0410	RIGHT FRICTION CHAIN CLUTCH
35	03.0416	LEFT FRICTION CHAIN CLUTCH
36	03.0462	FRICTION CLUTCH CHAIN
37	03.0394	FRONT TENSIONER SCREW
38	03.0399	BACK TENSIONER SCREW
39	03.0294	BACK CHAIN TENSIONER
40	03.0342	FRONT CHAIN TENSIONER

TRANSMISSION (03.0000)

ITEM	PART CODE	DESCRIPTION
41	03.0461	FRICTION GEAR CHAIN
42	03.0455	HUB WASHER
43	03.0430	TENSIONER RETAINING RING
44	03.0425	LOCKING TENSIONER NUT
45	03.0281	CAPSCREW OF CROSS-TOOTHED COMPANION FLANGE
46	03.0282	ADAPTER FLANGE CAPSCREW OF DRIVE SHAFT
47	03.0284	CROSS-TOOTHED COMPANION FLANGE WASHER
48	03.0283	CROSS-TOOTHED COMPANION FLANGE NUT
49	03.0268	CARDAN SHAFT OF TRANSMISSION DRIVE

 STEERING FRICTION MECHANISM (03.3000)

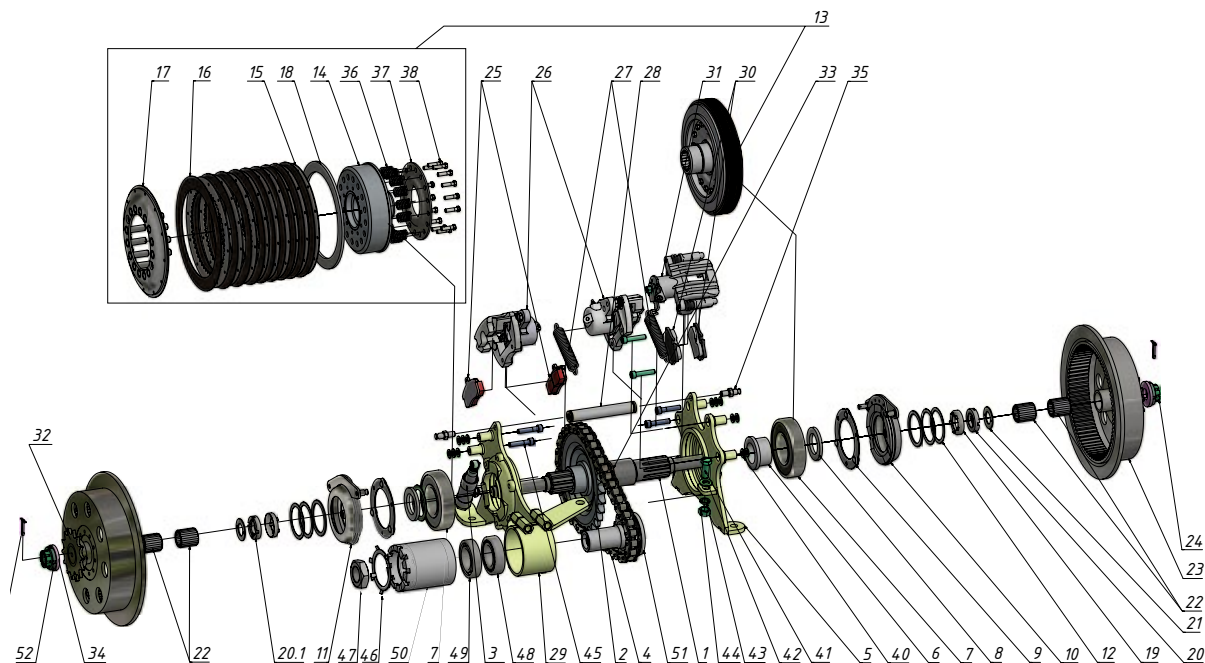

STEERING FRICTION MECHANISM (03.3000)

ITEM	PART CODE	DESCRIPTION
1	03.0172	STEERING FRICTION MECHANISM SHAFT
2	03.0103	STEERING MECHANISM SPROCKET Z 30
3	03.0120	HYDRAULIC CYLINDER
4	03.0243	STEERING MECHANISM CHAIN
5	03.0023	BODY CORNER PANEL LEFT, ASSEMBLED
6	03.0174	BEARING BUSH
7	03.0222	SHAFT BEARING
8	03.0189	WASHER
9	03.0168	THRUST BEARING
10	03.0150	LEFT KNUCKLE
11	03.0159	RIGHT KNUCKLE
12	03.0226	ADJUSTING WASHER 2,0MM.
12	03.0227	ADJUSTING WASHER 2,2MM.
12	03.0228	ADJUSTING WASHER 2,4MM.
12	03.0229	ADJUSTING WASHER 2,6MM.
12	03.0230	ADJUSTING WASHER 2,8MM.
12	03.0231	ADJUSTING WASHER 3,0MM.
12	03.0232	ADJUSTING WASHER 3,2MM.
12	03.0233	ADJUSTING WASHER 3,6MM.
12	03.0234	ADJUSTING WASHER 3,8MM.


ITEM	PART CODE	DESCRIPTION
12	03.0235	WASHER
12	03.0236	WASHER
13	03.0042	STEERING FRICTION MECHANISM
14	03.0043	FRICTION RACE
15	03.0060	FRICTION DRIVING DISK
16	03.0062	FRICTION DRIVEN DISK
17	03.0064	FRICTION PRESSURE PLATE
18	03.0058	FRICTION DISK
19	03.0187	RETAINING WASHER
20	03.0178	NUT
20.1	03.0180	NUT LH
21	03.0191	WASHER
22	03.0246	DRUM SUPPORT BEARING
23	03.0088	DRUM
24	03.0182	TUT LH
25	03.0209	RIGHT BRAKE PAD
26	03.0240	RIGHT CALLIPER
26	03.0241	LEFT CALLIPER
27	03.0464	STEERING MECHANISM SPRING
28	03.0144	BOOST

STEERING FRICTION MECHANISM (03.3000)

ITEM	PART CODE	DESCRIPTION
29	03.0002	BODY CORNER PANEL RIGHT, ASSEMBLED
30	03.0211	PARKING BRAKE SHOE
31	03.0110	PARKING BRAKE CALLIPER
32	03.0097	DRUM SUPPORT BEARING
33	03.0176	STEERING MECHANISM CHAIN
34	03.0185	DRUM WASHER
35	03.0213	SPACER BOLT
36	03.0066	FRICTION SPRING
37	03.0050	FRICTION CAP
38	03.0068	FRICTION BOLT
39	03.0239	DRUM LOCK NUT PIN
40	03.0226	ADJUSTING WASHER 0,3MM.
40	03.0227	ADJUSTING WASHER 0,5MM.
40	03.0228	ADJUSTING WASHER 1,0MM.
40	03.0229	ADJUSTING WASHER 2,0MM.
41	03.0217	LEFT BODY CORNER PANEL BOLT
42	03.0224	LEFT BODY CORNER PANEL WASHER
43	03.0225	LEFT BODY CORNER PANEL WASHER
44	03.0220	LEFT BODY CORNER PANEL NUT
45	03.0219	CALLIPER SCREW

ITEM	PART CODE	DESCRIPTION
46	03.0087	ECCENTRIC WASHER
47	03.0083	ECCENTRIC NUT
48	03.0085	ECCENTRIC BEARING
49	03.0086	ECCENTRIC BEARING
50	03.0078	ECCENTRIC
51	03.0071	DRIVING SPROCKET
52	03.0221	NUT

 DOORS AND WINDOWS INSTALLATION (04.0000)

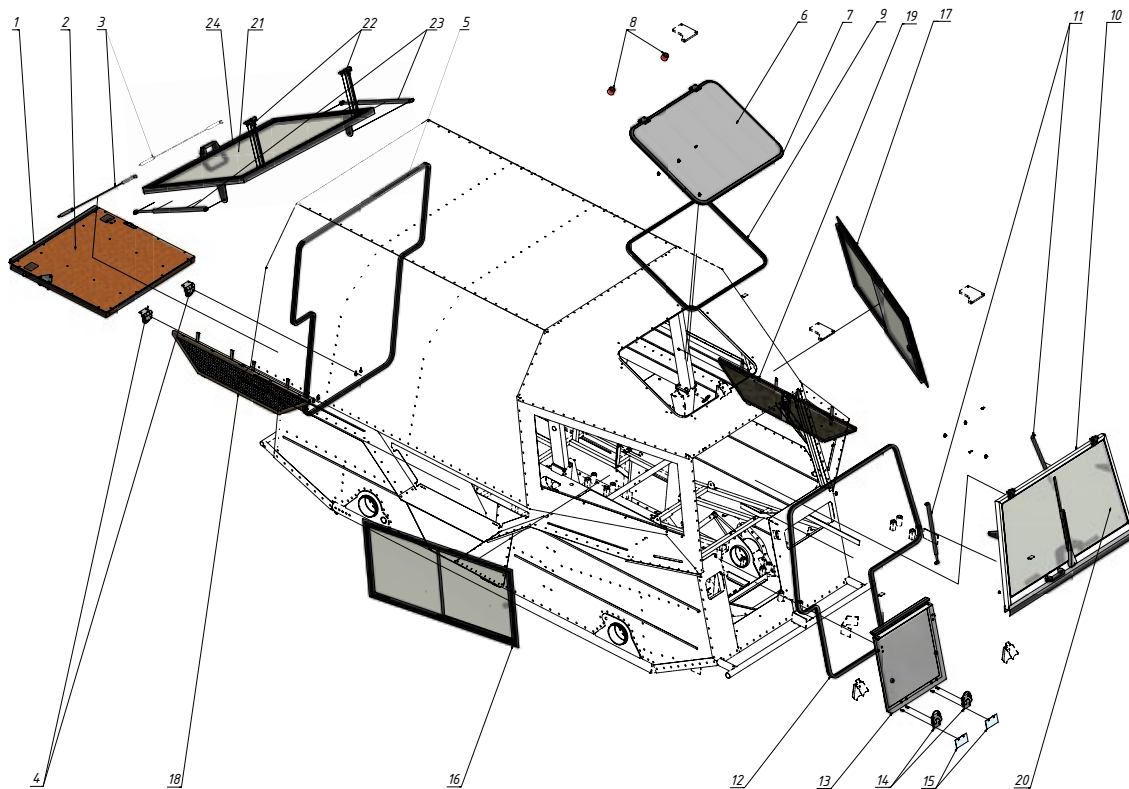


ITEM	PART CODE	DESCRIPTION
1	04.0015	REAR DOOR RUBBER
2	04.0002	REAR DOOR, ASSEMBLED
3	04.0041	STEEL ROPE OF REAR DOOR
3	04.0040	THIMBLE STEEL CABLE
3	04.0039	STEEL CABLE CLAMP
3	04.0045	HEAT SHRINK SLEEVE
4	04.0044	SIDE BARRIER OF REAR DOOR
5	04.0213	BACK APERTURE RUBBER
6	04.0142	HATCH COVER
7	04.0155	HATCH COVER SEALING
8	04.0163	DOOR STOP LOCK
9	04.0155	HATCH SEALING
10	04.0088	FRONT WINDOW ASSEMBLED
11	04.0139	FRONT WINDOW LIFT SUPPORT
12	04.0213	FRONT APERTURE SEALING
13	04.0052	FRONT DOOR
14	04.0044	SIDE BARRIER OF FRONT DOOR
15	04.0047	SIDE BARRIER CAST-IN
16	04.0212	DRIVER'S RIGHT WINDOW
17	04.0211	DRIVER'S LEFT WINDOW

DOORS AND WINDOWS INSTALLATION (04.0000)

ITEM	PART CODE	DESCRIPTION
18	04.0165	RIGHT GRILLE
19	04.0164	LEFT GRILLE
20	04.0115	WINDSHIELD
21	05.0542	REAR WINDOW
22	05.0551	REAR WINDOW HINGE
23	05.0552	REAR WINDOW LIFT SUPPORT
24	05.0532	REAR WINDOW, ASSEMBLED

 
FRONT DOOR (04.2100)

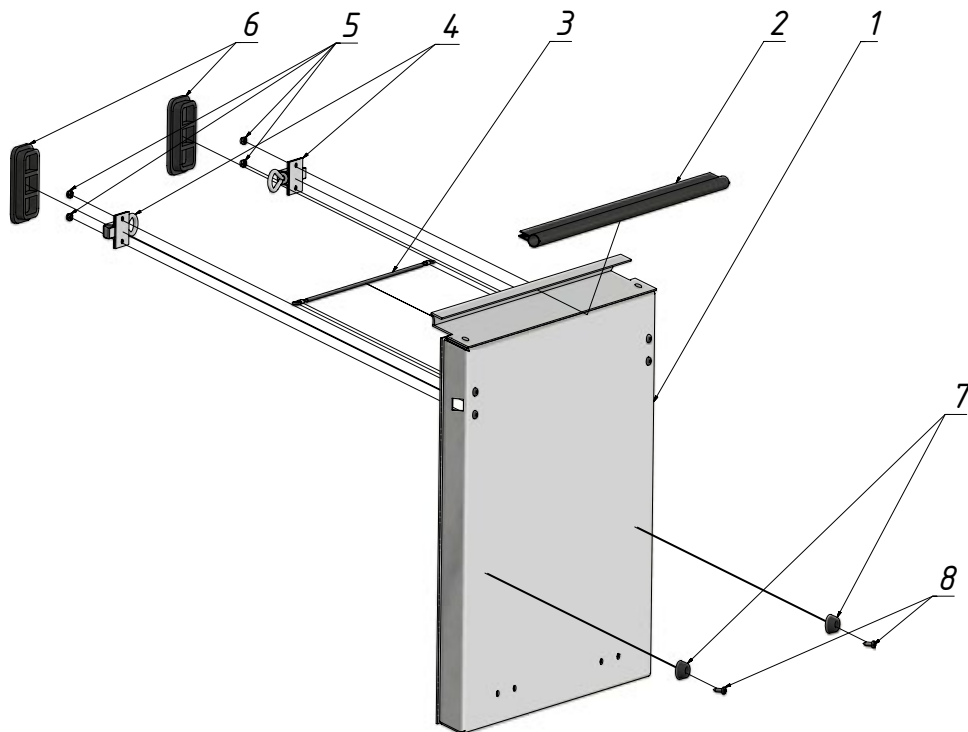

FRONT DOOR (04.2100)

ITEM	PART CODE	DESCRIPTION
1	04.0052	FRONT DOOR
2	04.0084	FRONT DOOR SEALING
3	04.0078	FRONT DOOR LOCK CABLE
4	04.0016	FRONT DOOR LOCK
5	04.0076	FRONT DOOR NUT
6	04.0081	FRONT DOOR PLUG
7	04.0082	FRONT DOOR STRIKER
8	04.0074	FRONT DOOR SCREW

 
FRONT WINDOW ASSEMBLY (04.3100)

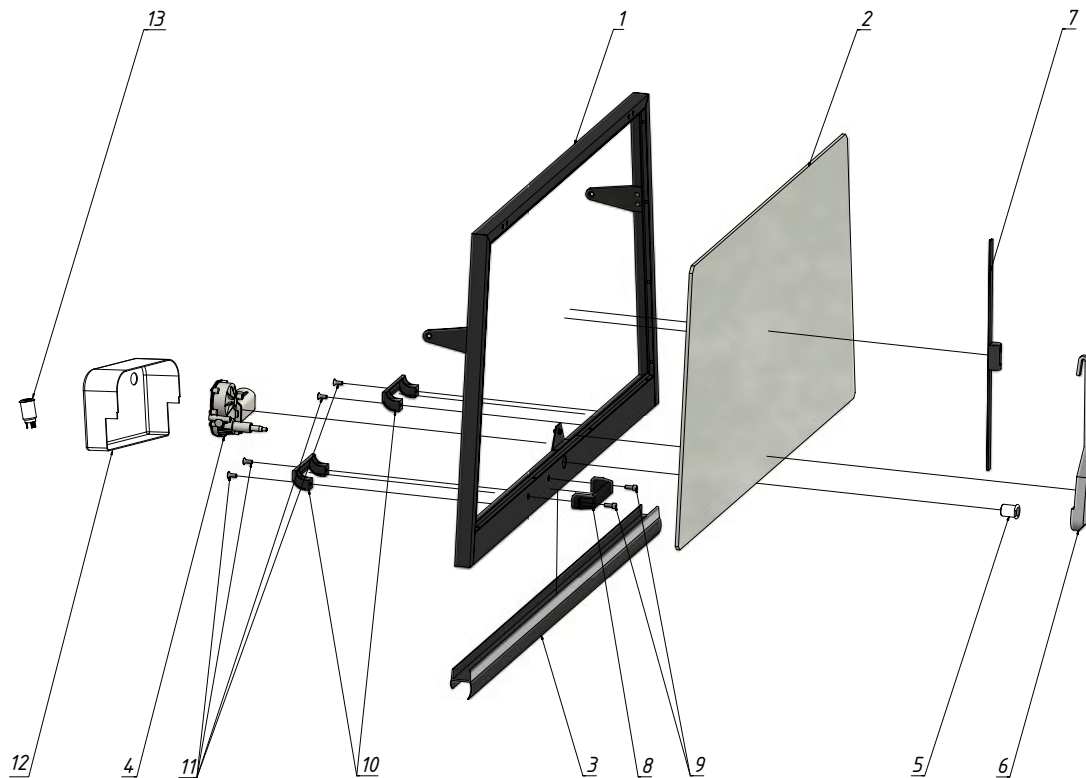

FRONT WINDOW ASSEMBLY (04.3100)

ITEM	PART CODE	DESCRIPTION
1	04.0245	FRONT WINDOW FRAME
2	04.0115	WINDSHIELD
3	04.0122	FRONT WINDOW SEALING
4	04.0118	WINDSHIELD WIPER GEARED MOTOR
5	04.0116	GEARED MOTOR BUSH
6	04.0120	WINDSHIELD WIPER BLADES PLATE
7	04.0133	WINDSHIELD WIPER BLADES
8	04.0132	FRONT WINDOW HANDLE
9	04.0127	HANDLE SCREW
10	04.0136	FRONT WINDOW HANDLE
11	04.0244	HANDLE SCREW
12	04.0124	GEARED MOTOR CASE
13	11.0099	BUTTON

 
REAR WINDOW ASSEMBLY (05.4200)

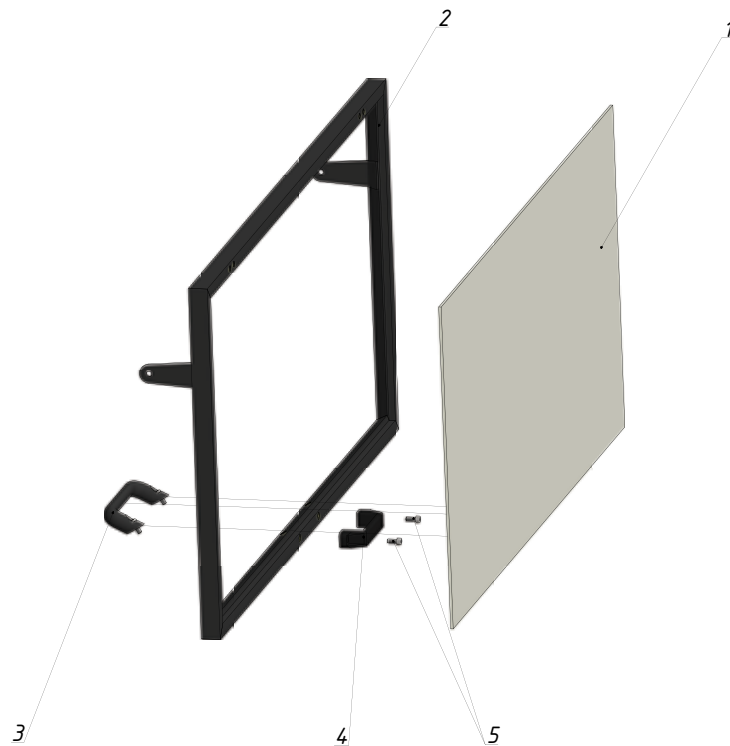

REAR WINDOW ASSEMBLY (05.4200)

ITEM	PART CODE	DESCRIPTION
1	05.0542	REAR WINDOW GLASS
2	05.0532	REAR WINDOW FRAME
3	05.0486	INSIDE HANDLE
4	04.0132	OUTSIDE HANDLE
5	04.0127	SCREW

 
BACK DOOR (04.1000)

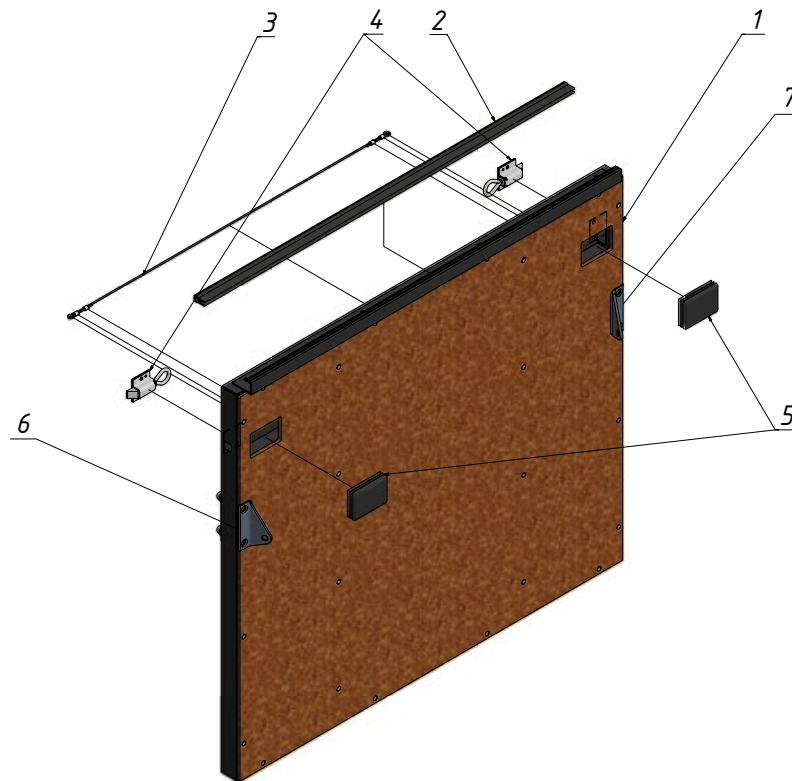

BACK DOOR (04.1000)

ITEM	PART CODE	DESCRIPTION
1	04.0021	REAR DOOR FRAME
2	04.0015	REAR DOOR RUBBER
3	04.0013	REAR DOOR LOCK CABLE
4	04.0016	REAR DOOR LOCK
5	04.0005	REAR DOOR PLUG
6	04.0228	RIGHT HINGE OF REAR DOOR
7	04.0229	LEFT HINGE OF REAR DOOR

 
SEATS AND SHELVES INSTALLATION (06.0000)

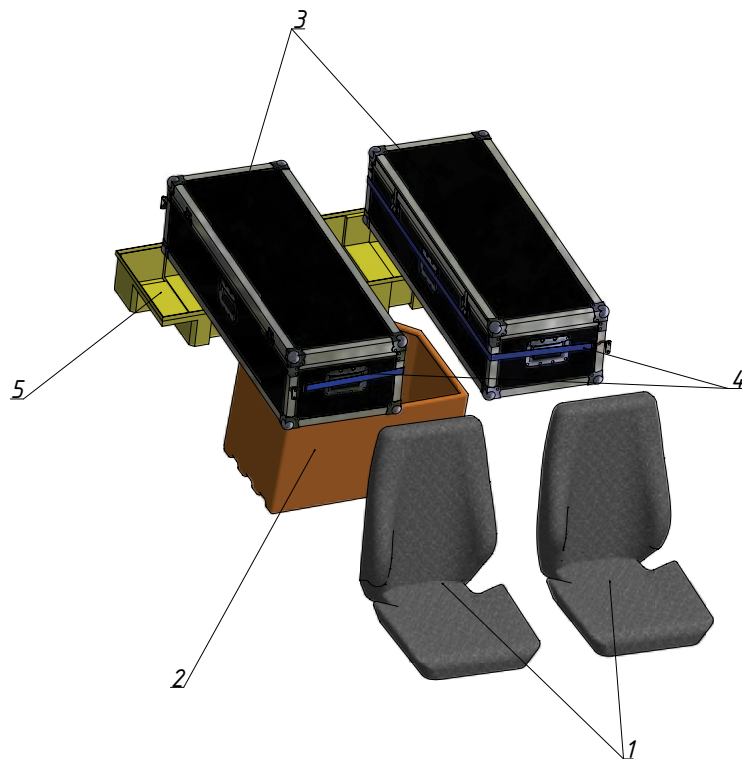

SEATS AND SHELVES INSTALLATION (06.0000)

ITEM	PART CODE	DESCRIPTION
1	06.0001	DRIVER SEAT AND PASSENGER SEAT
2	06.0091	TOOLBOX
3	06.0004	LOCKER
4	06.0058	TRAILER STRAPS
5	06.0093	DUCT

 
BODY COMPONENTS INSTALLATION (05.0000)

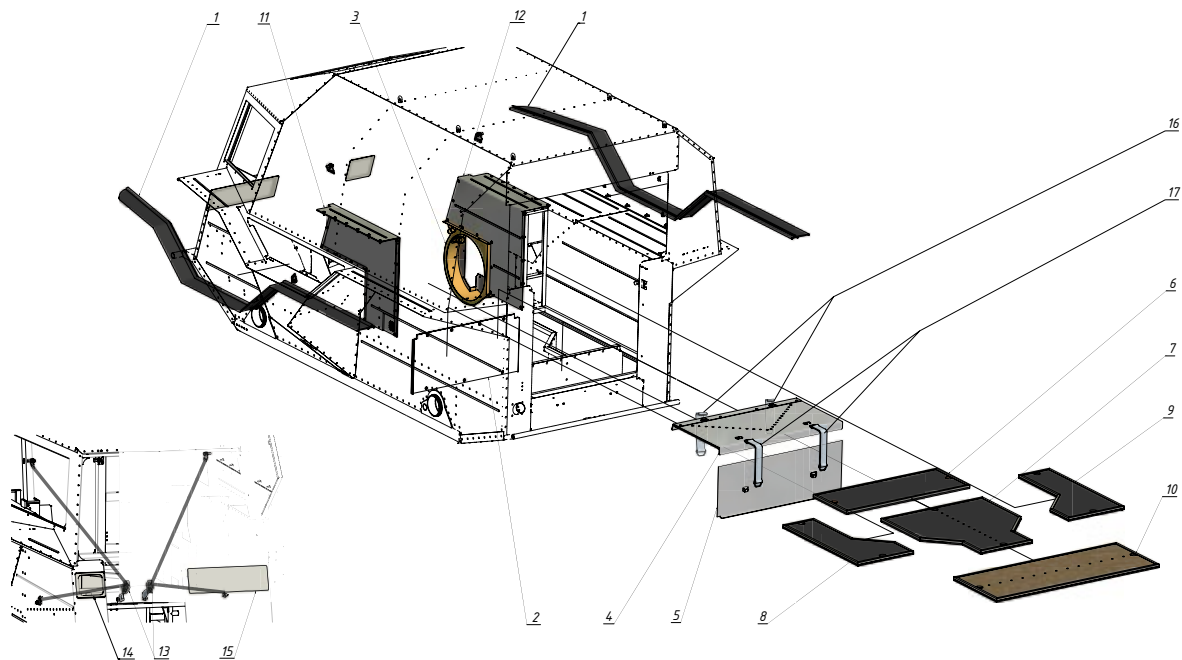

BODY COMPONENTS INSTALLATION (05.0000)

ITEM	PART CODE	DESCRIPTION
1	05.0042	OVERFENDER
2	05.0240	WALL
3	05.0002	FAN CASE
4	05.0055	HOOD
5	05.0246	HOOD
6	05.0073	BOTTOM CEILING
7	05.0089	BILGE BOTTOM CEILING
8	05.0108	BOTTOM CEILING OVER LEFT TENSIONER
9	05.0131	BOTTOM CEILING OVER RIGHT TENSIONER
10	05.0154	FUEL TANK BOTTOM CEILING
11	05.0172	LEFT TAPE COVER
12	05.0211	RIGHT TAPE COVER
13	05.0490	SEAT BELT KIT FOR DRIVER AND PASSENGER
14	05.0050	GLASS 150X175
15	05.0052	GLASS 150X485
16	05.0271	HOOD BELT
17	05.0270	HOOD BELT

 
CABIN PANELS (05.6000)

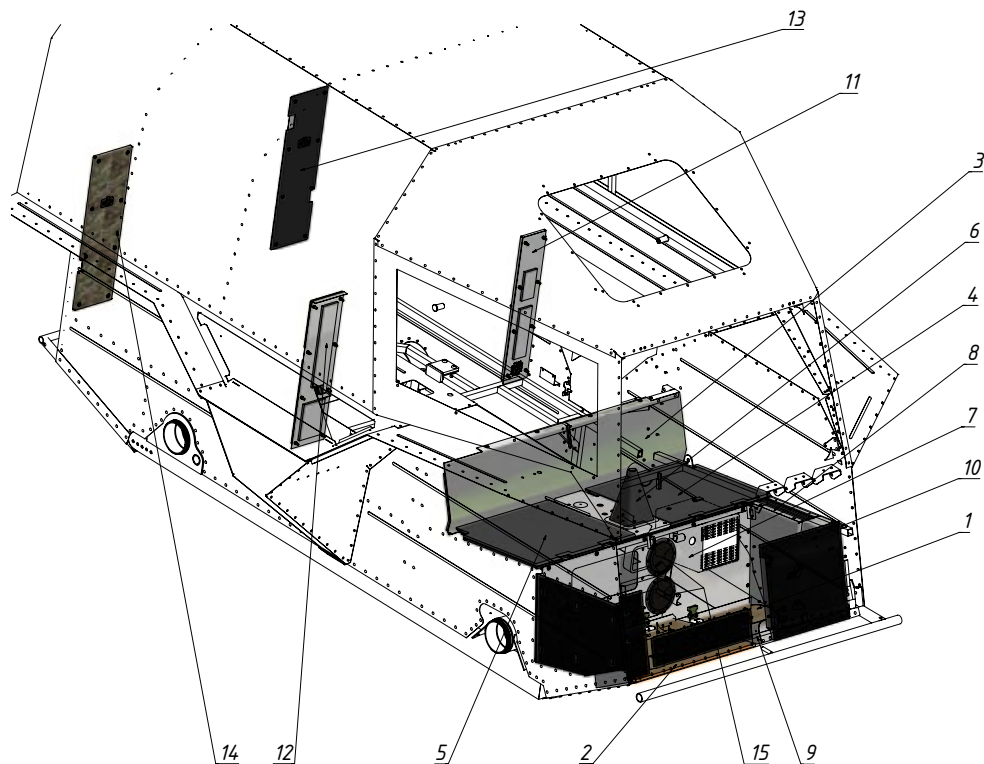

CABIN PANELS (05.6000)

ITEM	PART CODE	DESCRIPTION
1	05.0555	LEFT PANEL
2	05.0563	LOWER PANEL
3	05.0575	REAR PANEL
4	05.0618	SEAT PANEL
5	05.0623	SEAT PANEL
6	05.0628	MIDDLE PANEL
7	05.0643	FRONT LOWER PANEL
8	05.0669	FRONT LEFT PANEL
9	05.0678	COVER
10	05.0689	CAP
11	05.0584	LEFT SPOT-FACING
12	05.0591	RIGHT SPOT-FACING
13	05.0598	LEFT CASING
14	05.0608	RIGHT CASING
15	05.0665	INSPECTION MANHOLE

 POWER UNIT (10.1100)

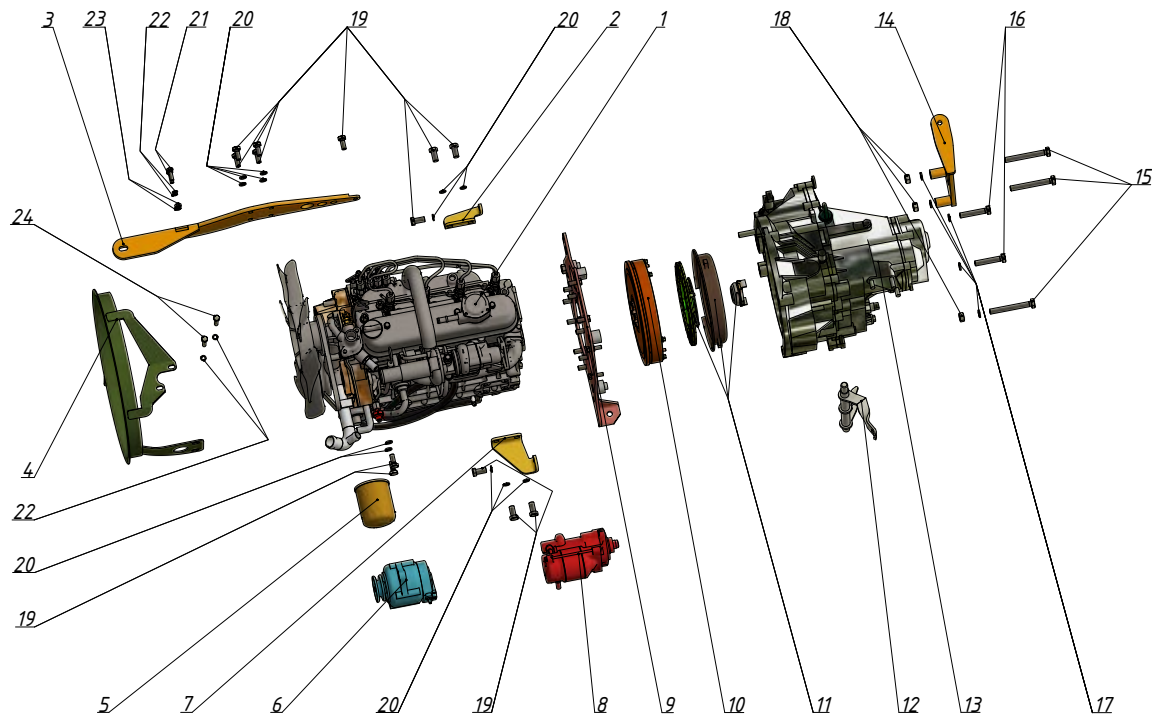


POWER UNIT (10.1100)

ITEM	PART CODE	DESCRIPTION
1	10.0049	ENGINE
2	10.0036	SMALL PLATE BRACKET
3	10.0051	ENGINE BRACKET
4	10.0057	FAN CASING
5	10.0438	OIL FILTER
6	10.0439	ALTERNATOR
7	10.0043	PLATE BRACKET
8	12.0133	STARTER
9	10.0004	GEARBOX ADAPTER PLATE UNIT
10	10.0033	FLYWHEEL
11	10.0111	CLUTCH MECHANISM ASSEMBLED
12	10.0076	CLUTCH SHIFTING FORK
13	10.0075	GEARBOX
14	10.0067	GEARBOX BRACKET
15	10.0462	BOLT
16	10.0463	BOLT
17	10.0110	WASHER
18	10.0107	NUT
19	10.0046	BOLT
20	03.0284	NUT


ITEM	PART CODE	DESCRIPTION
21	10.0100	BOLT
22	09.0105	WASHER
23	09.0101	NUT
24	10.0101	BOLT

 POWER UNIT INSTALLATION (10.1000)

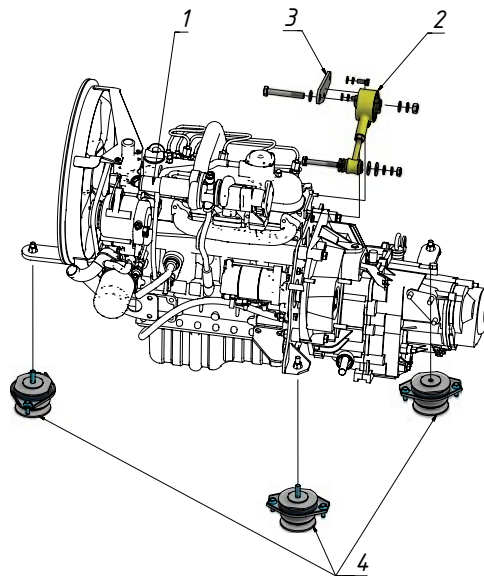


ITEM	PART CODE	DESCRIPTION
1	10.0002	POWER UNIT
2	10.0115	SUSPENSION ROD
3	10.0120	PLATE
4	10.0133	ENGINE SUPPORT CUSHION

 BRAKE SYSTEM (07.0000)

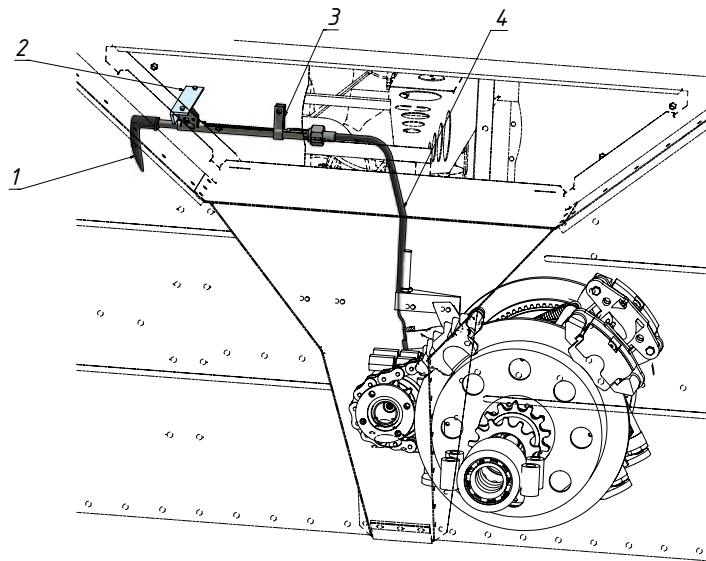



ITEM	PART CODE	DESCRIPTION
1	07.0001	PARKING BRAKE WITH CABLE, ASSEMBLED
2	07.0019	BRACKET
3	07.0014	BRACKET
4	07.0002	PARKING BRAKE CABLE

 WHEEL ASSEMBLY (08.1000)

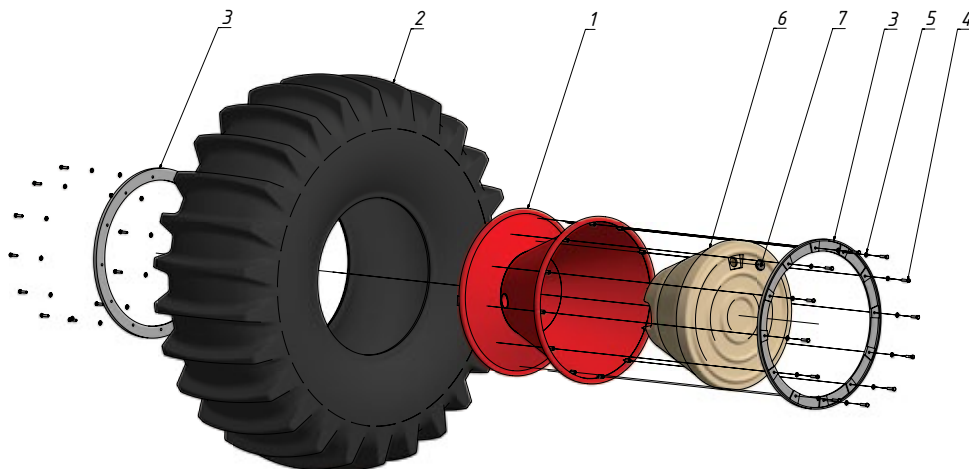


ITEM	PART CODE	DESCRIPTION
1	08.0002	DISC
2	08.0019	TIRE
3	08.0015	BEDLOCK
4	08.0029	LOCK RING BOLT
5	03.0223	BOLT WASHER
6	08.0024	WHEEL FUEL TANK
7	08.0025	FILLER CAP OF WHEEL TANK

  WHEEL INSTALLATION (08.0000)

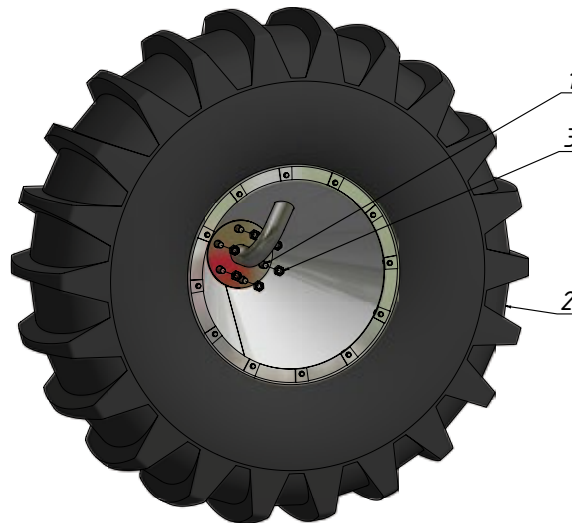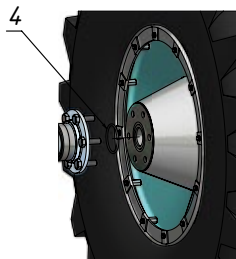


ITEM	PART CODE	DESCRIPTION
1	03.0256	HUB BOLT
2	08.0001	WHEEL ASSEMBLED
3	08.0028	HUB WASHER
4	08.0027	FILLER RING

 INTERIOR PANELS ASSEMBLING (06.7000)

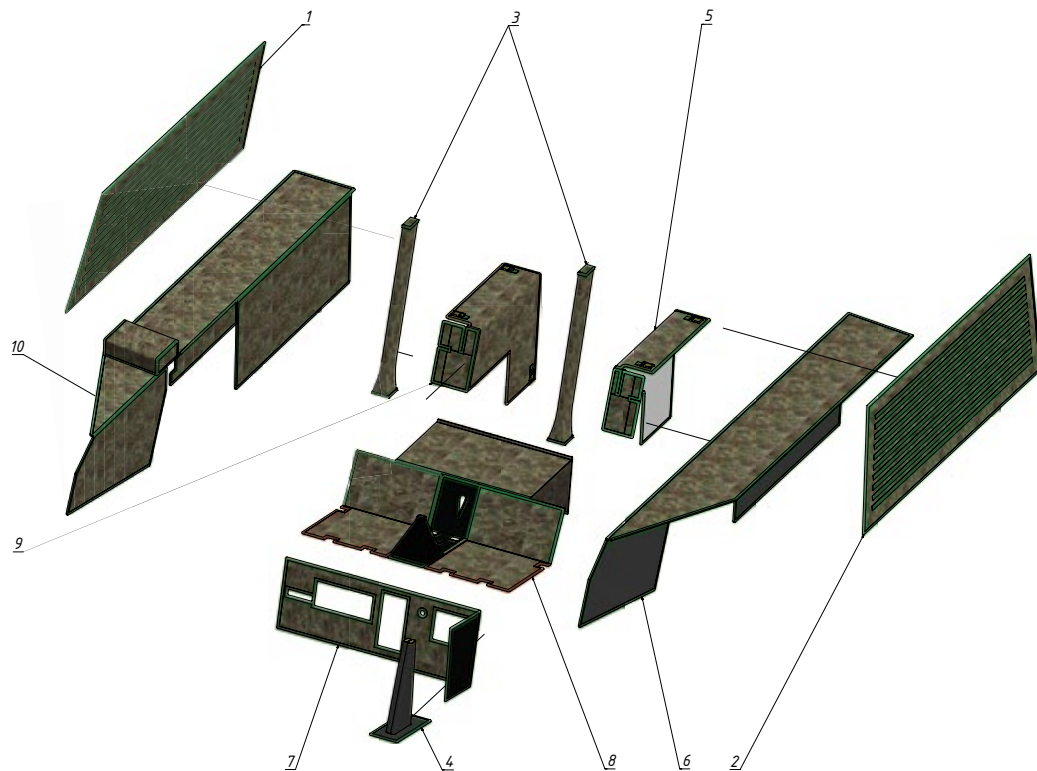


ITEM	PART CODE	DESCRIPTION
1	06.0074	RIGHT PANEL
2	06.0073	LEFT PANEL
3	06.0075	ROLL OVER BAR BOOT
4	06.0077	CONTROL ARM BOOT
5	06.0078	LEFT CORNER PANEL
6	06.0079	PORTSIDE FACING PANEL
7	06.0080	FRONT PANEL
8	06.0081	HOOD PANEL
9	06.0082	RIGHT CORNER PANEL
10	06.0095	STARBOARD FACING PANEL

 AIR SYSTEM (10.3000)

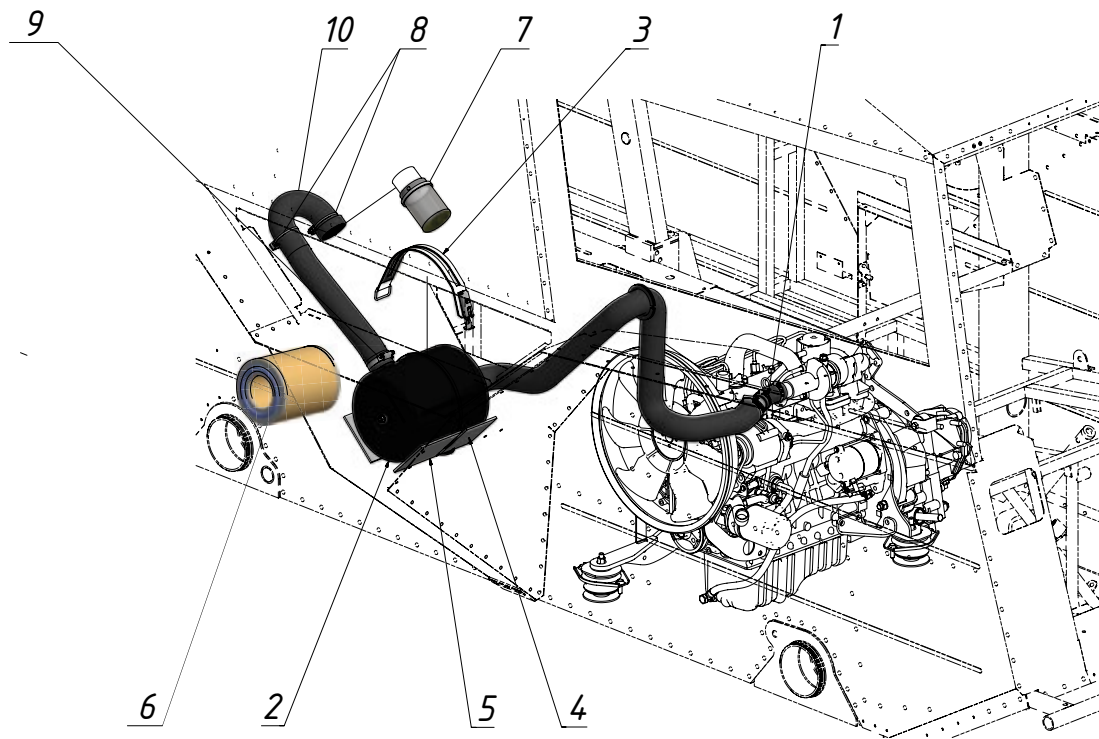


ITEM	PART CODE	DESCRIPTION
1	10.0195	ADAPTER
2	10.0201	AIR FILTER BODY
3	10.0208	AIR FILTER CLAMP
4	10.0222	AIR FILTER GASKET
5	10.0224	AIR FILTER GASKET
6	10.0448	FILTER
7	10.0216	STRAINER/FILTER OF INLET VALVE
8	10.0228	AIR TUBE COUPLING
9	10.0168	AIR TUBE CLAMP
10	10.0231	AIR TUBE

 COOLING SYSTEM (10.2000)

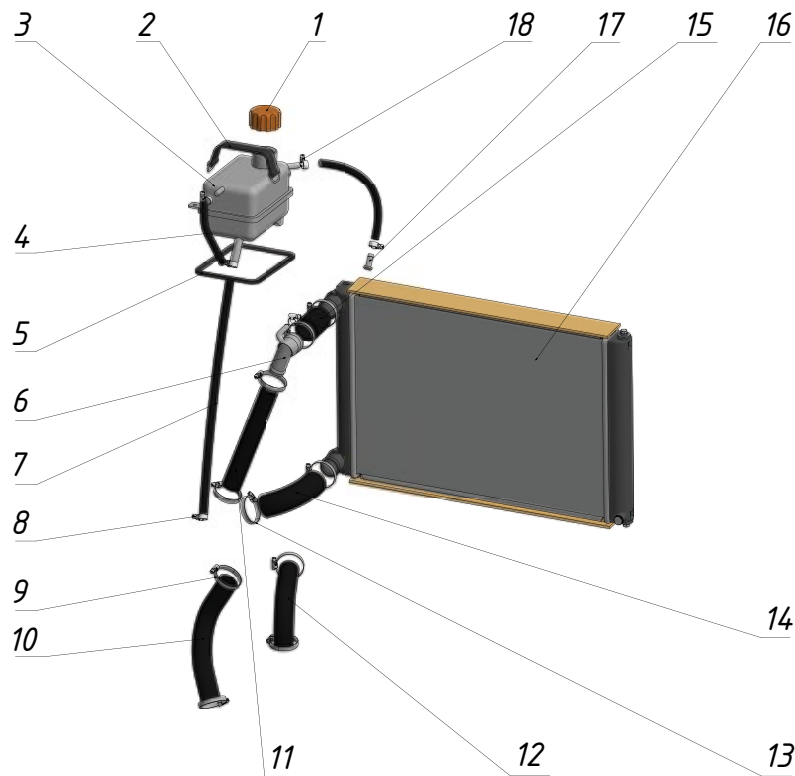


ITEM	PART CODE	DESCRIPTION
1	10.0157	RECOVERY RESERVOIR CAP
2	05.0270	MOUNTING STRAP OF RECOVERY RESERVOIR
3	10.0156	COOLANT TANK
4	10.0160	RUBBERIZED-FABRIC HOSE
5	10.0169	COOLANT TANK RUBBER
6	10.0135	TOP RADIATOR PIPE
7	09.0146	RUBBERIZED-FABRIC HOSE
8	09.0191	PIPE CLIP
9	10.0167	PIPE CLIP
10	10.0152	PIPE
11	10.0163	RUBBERIZED-FABRIC HOSE
12	10.0150	PIPE
13	10.0168	CLAMP
14	10.0148	PIPE
15	10.0164	RUBBERIZED-FABRIC HOSE
16	10.0142	HEAT RADIATOR
17	10.0154	PLUG
18	09.0189	CLAMP

 TRANSMISSION CONTROL DRIVE (09.2000)

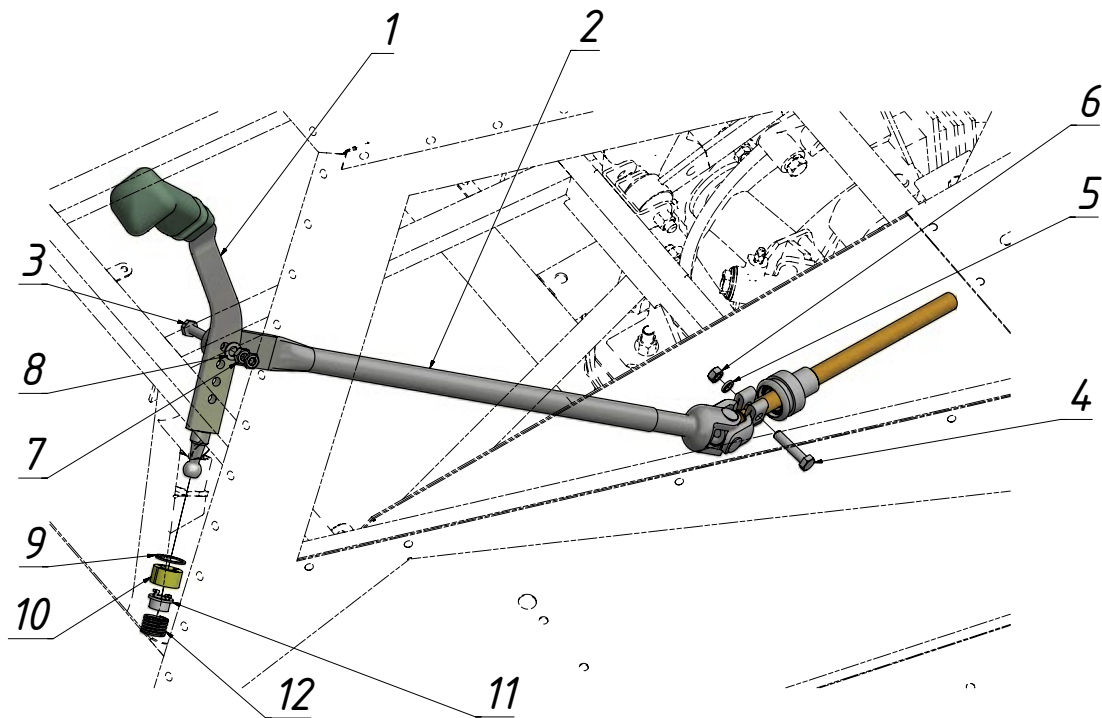


ITEM	PART CODE	DESCRIPTION
1	09.0207	GEARBOX ACTUATOR ARM
2	09.0216	GEARBOX OPERATING ROD
3	09.0223	AXLE
4	09.0226	BOLT
5	09.0105	WASHER
6	09.0228	NUT
7	09.0109	NUT
8	08.0018	WASHER
9	09.0232	RING
10	09.0233	BALL SOCKET
11	09.0233	WASHER
12	09.0233	GEARBOX

 FUEL PUMP CONTROL DRIVE (09.4000)

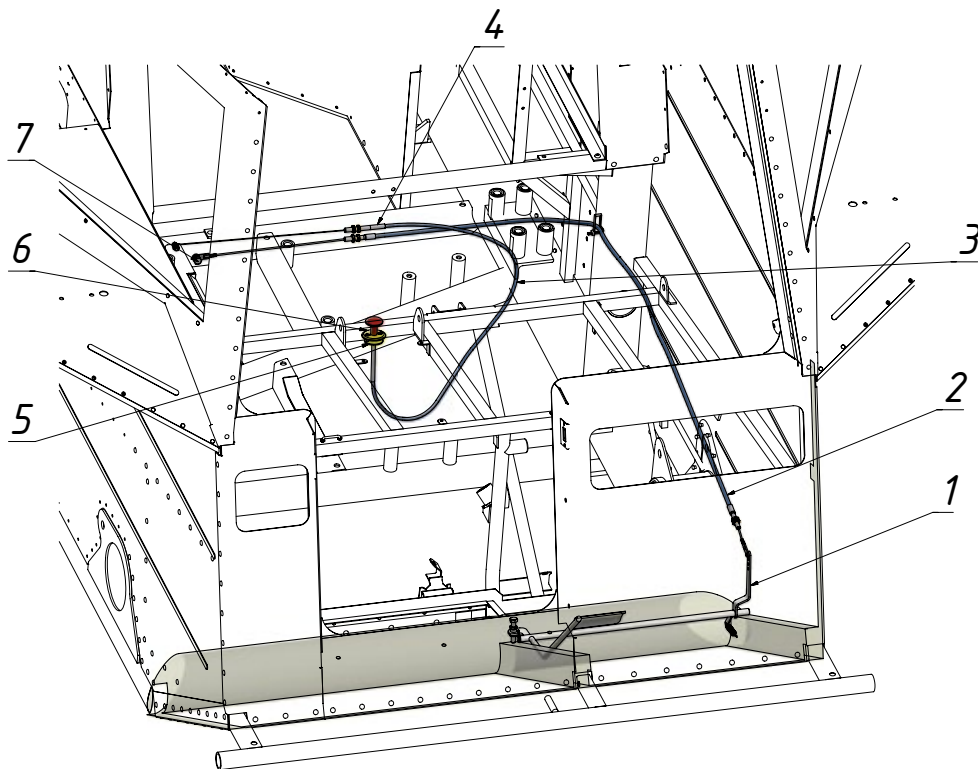

ITEM	PART CODE	DESCRIPTION
1	09.0305	LEVER
2	09.0323	CABLE
3	09.0331	EMERGENCY STOP CABLE
4	09.0333	GUIDE
5	09.0336	BUSH
6	09.0339	LINING
7	09.0342	AXLE

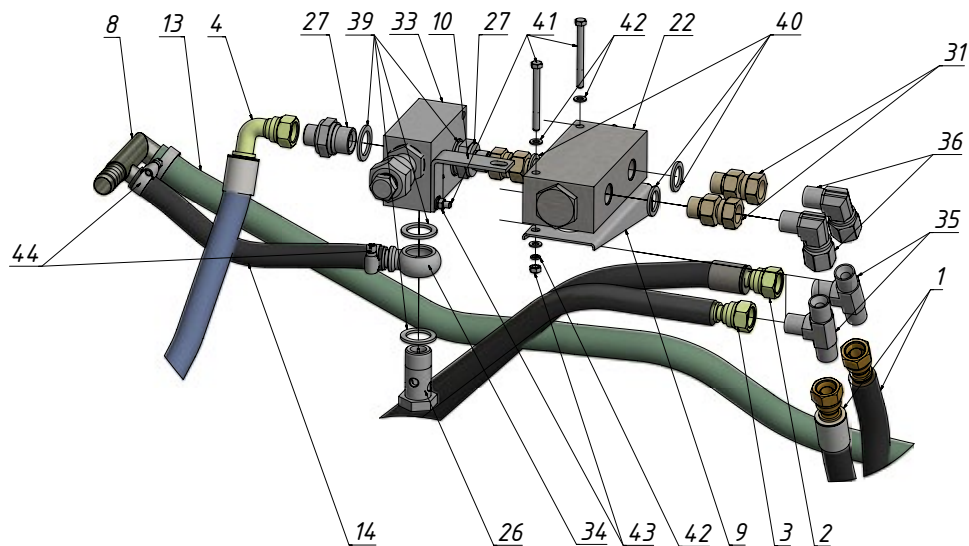 


ITEM	PART CODE	DESCRIPTION
1	09.0002	ARM HOSE
2	09.0003	LEFT FRICTION HOSE
3	09.0115	RIGHT FRICTION HOSE
4	09.0004	SUPPLYING HOSE
5	09.0005	CONTROL ARMS OF SLEWING MECHANISM

CONTROL GEAR OF SLEWING MECHANISM (09.1000)

ITEM	PART CODE	DESCRIPTION
6	09.0119	TEE PIPE
7	09.0126	FLUSH BUSHING
8	09.0134	TEE PIPE
9	02.0459	STREAM SPLITTER BRACKET
10	09.0142	VALVE BAR
11	09.0145	FILTER TUBE
12	09.0147	LEFT FRICTION HOSE
13	09.0149	FILTER TUBE
14	09.0151	VALVE SLEEVE
15	09.0153	VALVE SLEEVE
16	09.0155	RIGHT FRICTION HOSE
17	09.0157	OIL TANK SLEEVE
18	09.0159	TANK SLEEVE
19	09.0161	HOSE FOR AIR BOND CONNECTION
20	09.0163	REDUCING SLEEVE
21	09.0166	BRAKE PIPE
22	09.0183	STREAM SPLITTER
23	09.0184	TIP
24	09.0185	MASTER CYLINDER RESERVOIR
25	09.0186	RESERVOIR

ITEM	PART CODE	DESCRIPTION
26	09.0187	VALVE BOLT
27	09.0188	REDUCING CONECTOR
28	09.0192	RESERVOIR CLAMP OF MASTER CYLINDER
29	09.0193	BRAKE HOSE
30	09.0194	VALVE SLEEVE
31	09.0195	FLOW-DIVIDING VALVE SLEEVE
32	09.0196	FEEDING HOSE BOLT
33	09.0074	SAFETY VALVE
34	09.0198	VALVE FLUSH BUSHING
35	09.0200	VALVE TEE
36	09.0201	ANGLE FITTING
37	09.0202	FILTER
38	05.0709	PIPE CLIP
39	09.0203	VALVE FILLER RING
40	09.0204	FILLER RING OF FLOW-DIVIDING VALVE
41	09.0171	HOLD-DOWN BOLT OF FLOW-DIVIDING VALVE
42	09.0178	BOLT WASHER OF FLOW-DIVIDING VALVE
43	02.0630	BOLT NUT OF FLOW-DIVIDING VALVE
44	09.0190	VALVE SLEEVE CLAMP

 CONTROL ARMS OF SLEWING MECHANISM (09.1100)

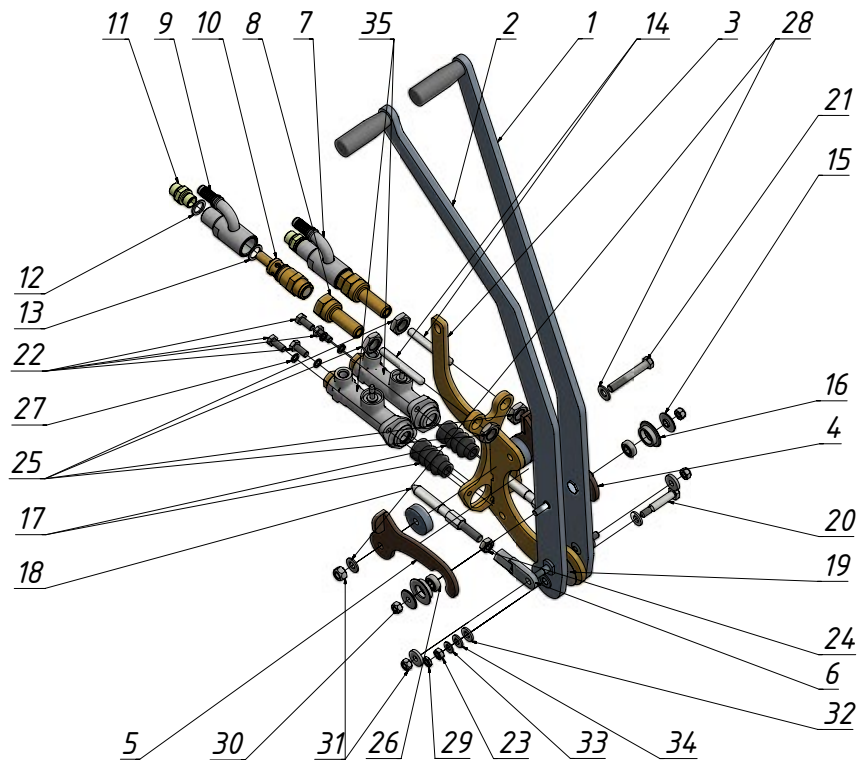


ITEM	PART CODE	DESCRIPTION
1	09.0006	LEFT FRICTION LEVER
2	09.0023	RIGHT FRICTION LEVER
3	09.0040	FRICTION LEVER BRACKET
4	09.0048	LEFT LEVER JAW
5	09.0054	RIGHT LEVER JAW
6	09.0077	PUSHER EYE OF CLUTCH CYLINDER
7	09.0060	PROPORTIONAL VALVE, ASSEMBLED
8	09.0061	VALVE CAP
9	09.0067	VALVE BODY
10	09.0197	PROPORTIONAL VALVE
11	03.0127	VALVE SLEEVE
12	09.0075	SLEEVE RING
13	09.0076	VALVE FILLER RING
14	09.0374	VALVE PUSHER
15	09.0084	JAW WASHER
16	09.0087	CAM FOLLOWER
17	09.0090	ANTHER OF HYDRAULIC CYLINDER
18	09.0092	CLUTCH CYLINDER PUSHER
19	09.0094	BRACKET WASHER
20	09.0096	LEVER PIN

CONTROL ARMS OF SLEWING MECHANISM (09.1100)

ITEM	PART CODE	DESCRIPTION
21	09.0099	LEVER BRACKET BOLT
22	09.0100	HYDRAULIC CYLINDER BOLT
23	09.0101	LEVER PIN WASHER
24	09.0102	PUSHER WASHER OF CLUTCH CYLINDER
25	09.0103	VALVE PUSHER WASHER
26	09.0104	JAW BEARING
27	09.0105	WASHER
28	03.0223	WASHER
29	09.0108	NUT
30	09.0109	NUT
31	09.0110	WASHER
32	09.0112	WASHER
33	09.0112	WASHER
34	09.0113	WASHER
35	09.0114	HYDRAULIC CYLINDER

 CLUTCH CONTROL ACTUATOR (09.3000)

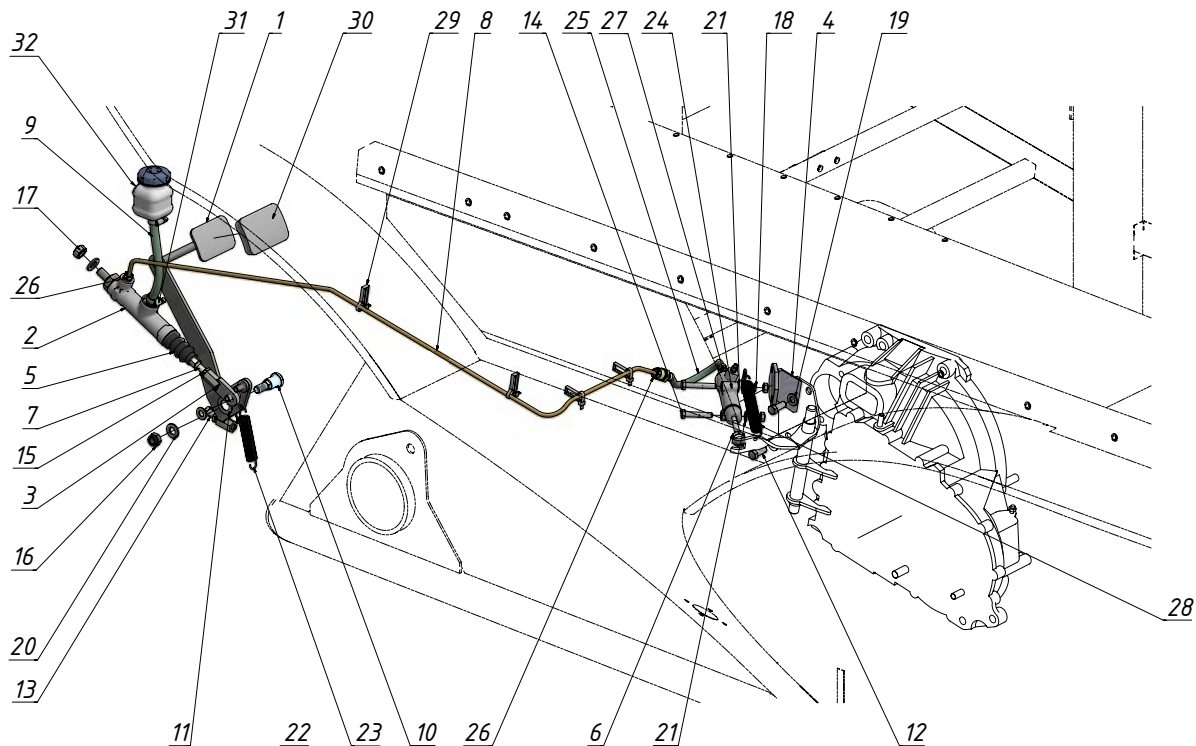


CLUTCH CONTROL ACTUATOR (09.3000)

ITEM	PART CODE	DESCRIPTION
1	09.0235	CLUTCH PEDAL
2	09.0249	CLUTCH MASTER CYLINDER
3	09.0077	PUSHER EYE OF CLUTCH CYLINDER
4	09.0259	CLUTCH WORKING CYLINDER BRACKET
5	09.0090	ANCHOR OF CLUTCH MASTER CYLINDER
6	09.0273	CLUTCH WORKING CYLINDER NUT
7	09.0276	PUSHER OF CLUTCH MASTER CYLINDER
8	09.0279	CLUTCH MASTER CYLINDER TUBE
9	08.0023	EXPANSION LINE OF CLUTCH MASTER CYLINDER
10	09.0240	CLUTCH PEDAL AXLE
11	03.0284	WASHER OF CLUTCH PEDAL AXLE
12	09.0284	BOLT OF CLUTCH RELEASE FORK LEVER
13	09.0285	BOLT OF CLUTCH PEDAL LEVER
14	09.0286	CLUTCH WORKING CYLINDER BOLT
15	09.0102	PUSHER NUT OF CLUTCH MASTER CYLINDER
16	09.0288	CLUTCH PEDAL AXLE NUT
17	09.0101	CLUTCH MASTER CYLINDER NUT
18	09.0105	CLUTCH WORKING CYLINDER WASHER
19	03.0223	BRACKET WASHER OF CLUTCH WORKING CYLINDER
20	09.0292	WASHER OF CLUTCH PEDAL AXLE

ITEM	PART CODE	DESCRIPTION
21	08.0018	CLUTCH RELEASE FORK LEVER
22	09.0294	SPRING COTTER PIN OF CLUTCH PEDAL AXLE
23	09.0295	CLUTCH PEDAL SPRING
24	09.0252	CLUTCH WORKING CYLINDER
25	09.0297	CLUTCH WORKING CYLINDER HOSE
26	09.0299	CLUTCH TUBE SLEEVE
27	09.0303	CLUTCH WORKING CYLINDER GASKET
28	09.0298	CLUTCH MASTER CYLINDER SPRING
29	05.0709	PIPE CLAMP OF CLUTCH MASTER CYLINDER
30	09.0301	CLUTCH PEDAL LINING
31	09.0189	EXPANSION LINE CLAMP OF CLUTCH MASTER CYLINDER
32	09.0186	TANK OF HYDRAULIC CLUTCH CYLINDER


 
EXHAUST SYSTEM (10.4000)

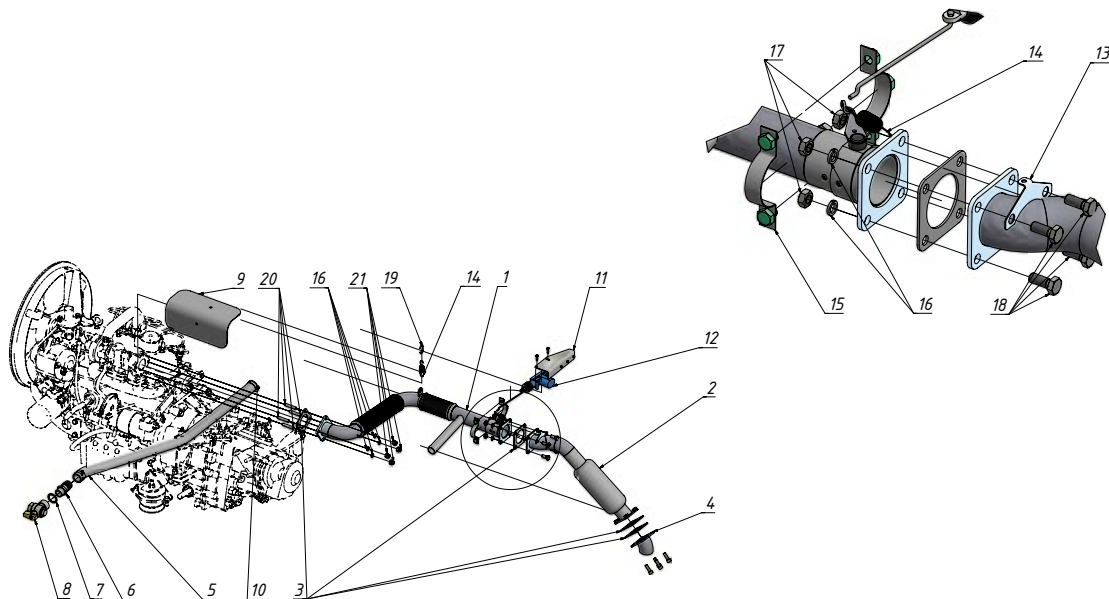

ITEM	PART CODE	DESCRIPTION
1	10.0248	FORE FUNNEL
2	10.0283	STRONGER, COMP.
3	10.0289	GASKET


ITEM	PART CODE	DESCRIPTION
4	10.0237	PIPE, COMP.
5	10.0305	PUMP UP HOSE
6	10.0445	PUMPING VALVE SLEEVE
7	10.0321	WASHER RING
8	10.0297	PUMPING VALVE
9	10.0241	PROTECTIVE HOUSING OF TURBOCHARGER
10	10.0226	PUMP UP HOSE CLAMP
11	10.0299	ACTUATOR BRACKET
12	10.0304	ACTUATOR
13	10.0291	SPRING PLATE
14	10.0322	SPRING
15	10.0323	FORE FUNNEL CLAMP
16	09.0105	WASHER
17	10.0106	NUT
18	09.0100	STRONGER BOLT
19	10.0314	STRAP
20	10.0319	TURBOCHARGER MOUNTING STUD
21	10.0320	TURBOCHARGER RETAINING NUT

  FUEL SYSTEM (10.5000)

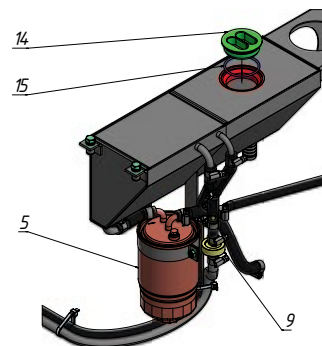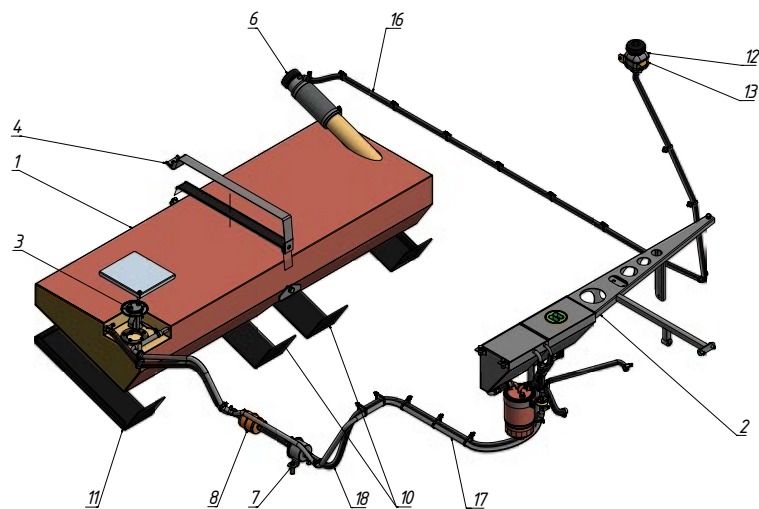


ITEM	PART CODE	DESCRIPTION
1	10.0406	FUEL TANK
2	10.0327	RECOVERY RESERVOIR BLOCK
3	10.0413	FUEL RESERVE SENSOR
4	10.0383	FUEL TANK STRAP
5	10.0416	SECONDARY FUEL FILTER
6	10.0437	FUEL TANK CAP
7	10.0415	FUEL PUMP
8	10.0414	FUEL PRELIMINARY FILTER
9	10.0417	BACK-PRESSURE VALVE
10	10.0390	FUEL TANK GASKET
11	10.0388	FUEL TANK GASKET
12	09.0186	TANK
13	10.0419	RESERVOIR CLAMP
14	08.0025	HYDRAULIC FLUID RESERVOIR CAP
15	08.0026	RESERVOIR CAP RING
16	10.0423	RUBBERIZED-FABRIC HOSE FOR AIR BOND CONNECTION
17	10.0423	RUBBERIZED-FABRIC HOSE FOR FUEL DELIVERY
18	10.0160	RUBBERIZED-FABRIC HOSE FOR FUEL DRAIN

 LUBRICATING CHAIN SYSTEM (12.5000)

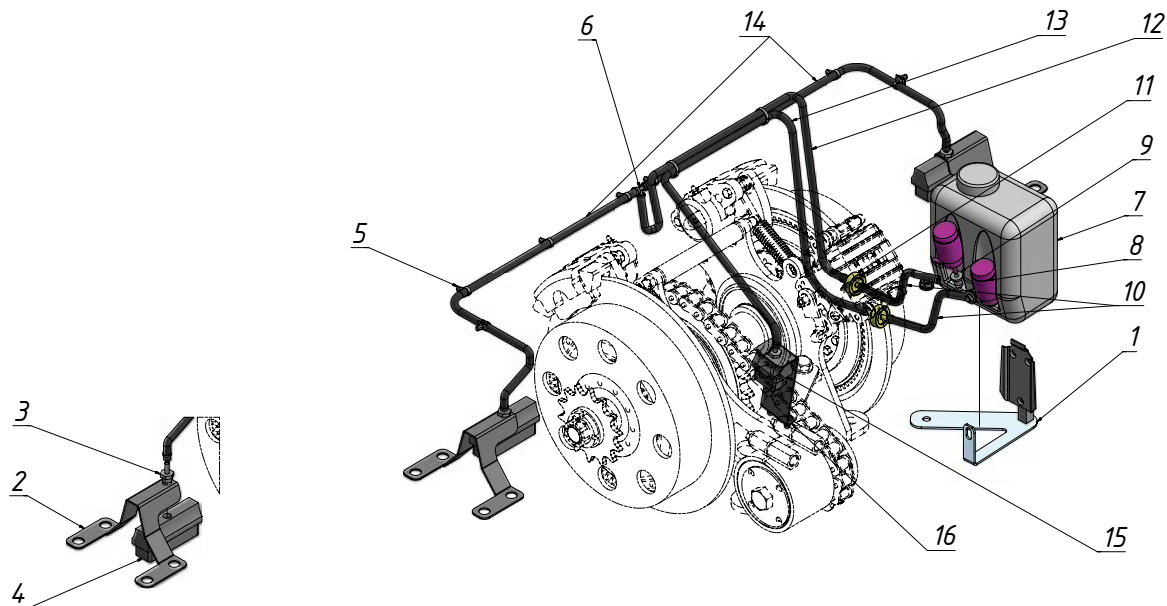

ITEM	PART CODE	DESCRIPTION
1	12.0071	CHAIN LUBRICANT RESERVOIR MOUNTING BRACKET
2	12.0081	BRUSH BRACKET
3	12.0096	BRUSH SLEEVE
4	12.0090	BRUSH
5	11.0147	HOSE CLAMP
6	10.0420	TEE PIPE
7	12.0097	CHAIN LUBRICANT RESERVOIR
8	12.0094	CHAIN LUBRICANT PUMP
9	11.0173	CHAIN LUBRICANT PUMP BAR
10	10.0422	HOSE
11	10.0417	BACK-PRESSURE VALVE
12	10.0422	HOSE
13	10.0422	HOSE
14	10.0422	HOSE
15	12.0078	BRUSH BRACKET
16	12.0091	BRUSH

 AIR HEATER INSTALLATION (12.2000)

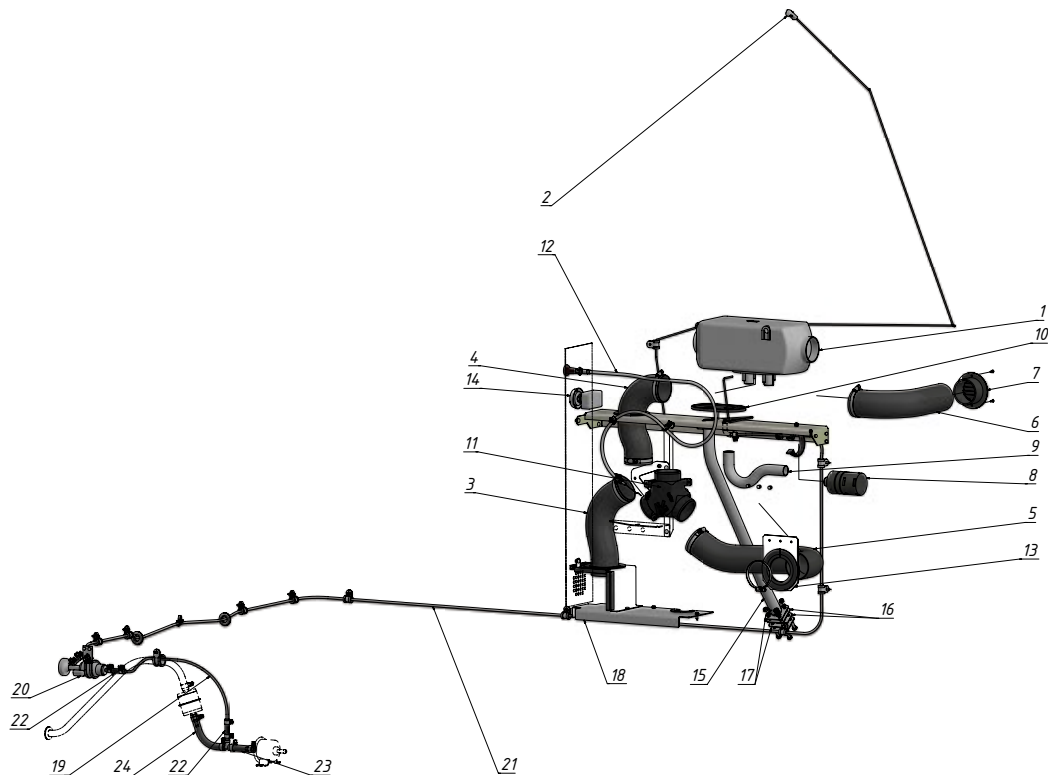


ITEM	PART CODE	DESCRIPTION
1	12.0046	PARKING HEATER
2	12.0069	STAND-ALONE TEMPERATURE SENSOR
3	12.0049	PLIABLE PIPE
4	12.0049	PLIABLE PIPE
5	12.0049	PLIABLE PIPE
6	12.0049	PLIABLE PIPE
7	12.0064	DEFLECTOR
8	12.0135	HEATER AIR FILTER
9	12.0139	AIR TUBE
10	12.0134	HEATER RUBBER GASKET
11	12.0047	AIR DISPENSER
12	12.0027	FLAP CONTROL WIRE
13	12.0014	AIR DUCT BRACKET
14	12.0063	HEATER TEMPERATURE CONTROLLER
15	12.0137	EXHAUST PIPE
16	12.0023	FLANGE GASKET OF EXHAUST PIPE
17	12.0020	FLANGE OF EXHAUST PIPE
18	12.0031	LINING
19	10.0422	FUEL SLEEVE
20	12.0136	FUEL INJECTION PUMP

AIR HEATER INSTALLATION (12.2000)

ITEM	PART CODE	DESCRIPTION
21	12.0140	FUEL SLEEVE
22	12.0138	FUEL SLEEVE
23	12.0138	FUEL SLEEVE
24	10.0160	FUEL SLEEVE

 ELECTRICAL EQUIPMENT (11.0000)

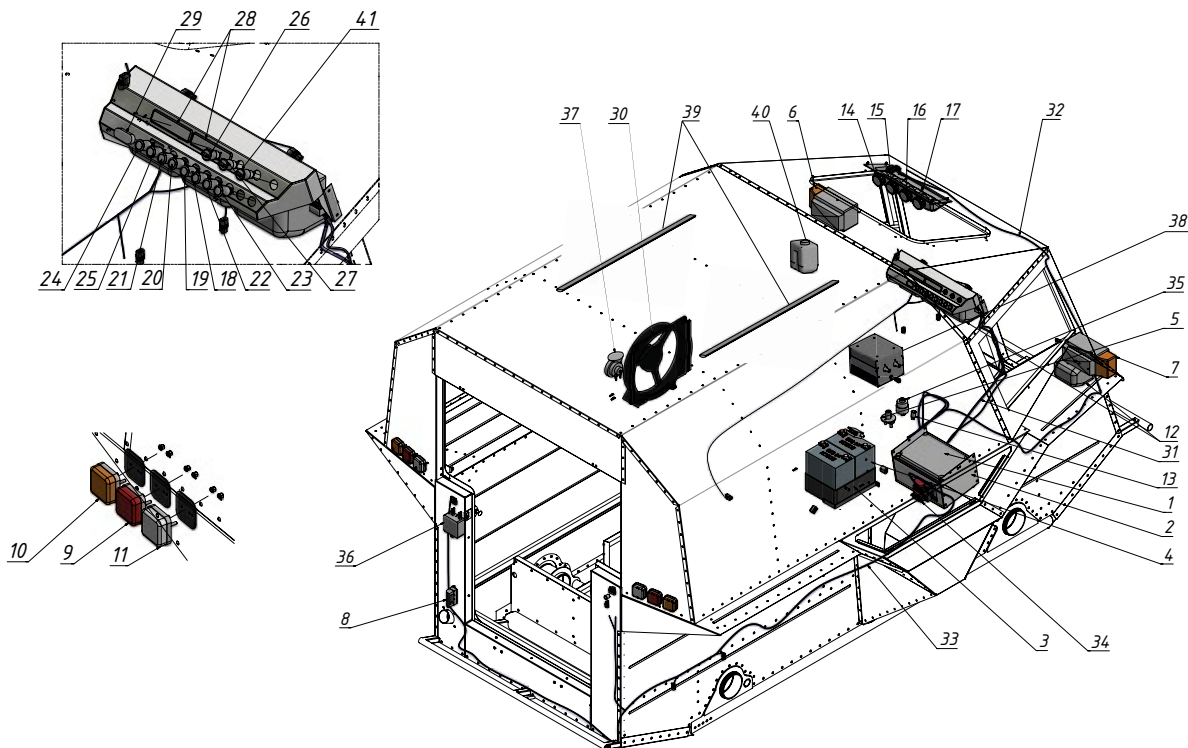

ELECTRICAL EQUIPMENT (11.0000)


ITEM	PART CODE	DESCRIPTION
1	11.0063	JUNCTION BOX
2	11.0064	JUNCTION BOX BRACKET
3	11.0174	ACCUMULATOR BATTERY TRAY
4	11.0169	ACCUMULATOR
5	11.0175	GROUND SWITCH
6	11.0200	RIGHT TURN LIGHT
7	11.0197	LEFT TURN LIGHT
8	11.0192	LICENCE PLATE LIGHT
9	11.0191	STOP LAMP
10	11.0190	TURN LIGHT
11	11.0189	BACK-UP LIGHT
12	11.0187	UPPER BEAM LIGHT
12	11.0188	LOWER BEAM LIGHT
13	11.0103	SWITCHING THE BACKUP BATTERY
14	11.0162	ENGINE TIMER
15	11.0161	VOLTMETER
16	11.0164	FUEL LEVEL INDICATOR
17	11.0163	TEMPERATURE INDICATOR (TI)
18	11.0106	FAN RELEASE BUTTON
19	11.0105	HEAT RELEASE BUTTON

ITEM	PART CODE	DESCRIPTION
20	11.0099	MAIN CHAIN LUBRICANT BUTTON
21	11.0100	BUTTON FOR CHAIN LUBRICANT OF SLEWING MECHANISM
22	11.0104	RELEASE BUTTON OF REAR BACK-UP CAMERA
23	11.0099	AUDIBLE SIGNAL BUTTON
24	11.0101	EMERGENCY LIGHTING BUTTON
25	11.0109	WINDSCREEN WASHER BUTTON
26	11.0103	ANTIDAZZLE/BEAM SWITCH BUTTON
27	11.0108	MARKER LIGHTS BUTTON
28	11.0111	INDICATING LIGHT UNIT
29	11.0103	PUMP UP START BUTTON
30	11.0186	ELECTRIC BLOWER
31	11.0001	FRONT RACK HARNESS
32	11.0018	INSTRUMENT PANEL HARNESS
33	11.0045	BACK RACK HARNESS
34	11.0026	ENGINE HARNESS
35	11.0170	IGNITION LOCK
36	11.0195	CAMERA
37	11.0185	AUDIBLE SIGNAL
38	10.0183	PARKING HEATER
39	11.0202	LED STRIP LIGHT

ELECTRICAL EQUIPMENT (11.0000)

ITEM	PART CODE	DESCRIPTION
40	11.0241	WASHER RESERVOIR
41	11.0107	ROTARY SWITCH

 MOUNTING BOX (11.0110)

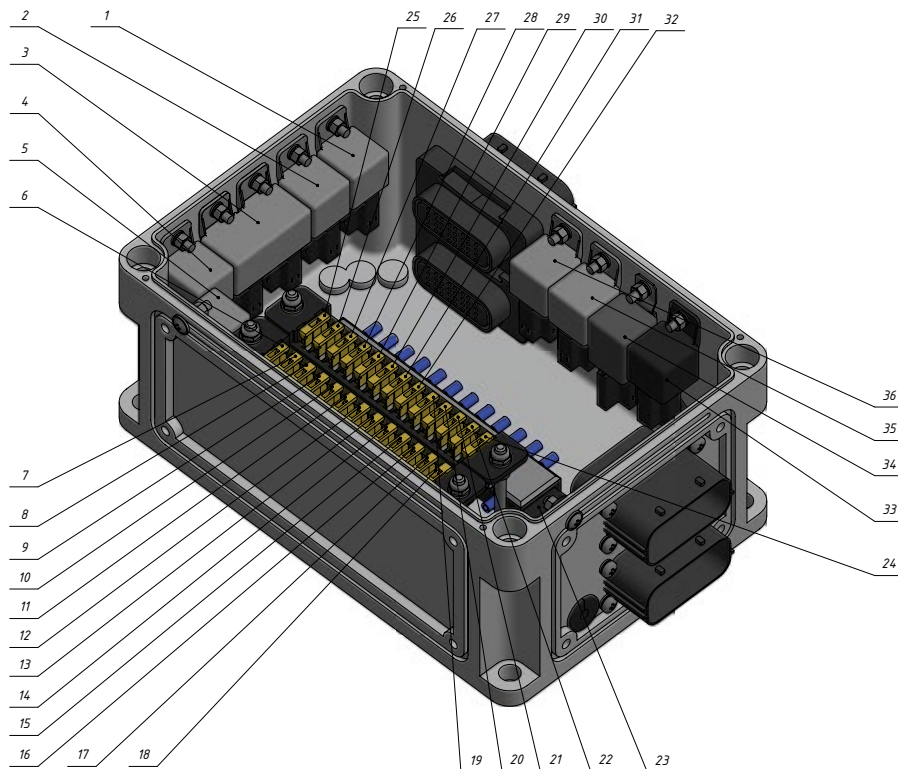


MOUNTING BOX (11.0110)

ITEM	PART CODE	DESCRIPTION
1	11.0072	LOWER BEAM RELAY
2	11.0072	UPPER BEAM RELAY
3	11.0073	HORN RELAY
4	11.0072	REVERSING LIGHT RELAY
5	11.0072	HEATING RELAY
6	11.0245	LOWER BEAM LEFT FUSE 10A
7	11.0246	LOWER BEAM RIGHT FUSE 10A
8	11.0245	UPPER BEAM LEFT FUSE 10A
9	11.0246	LOWER BEAM SIDE FUSE 10A
10	11.0248	TURN INDICATOR FUSE 10A
11	11.0243	DIMENSIONS FUSE 15A
12	11.0245	COURTESY LIGHT FUSE 15A
13	11.0243	MOTORS FUSE 15A
14	11.0244	BACKUP FUSE
15	11.0248	BACK SOCKET FUSE 15A
16	11.0244	WINDSHIELD WIPERS FUSE 20A
17	11.0244	SIGNAL FUSE 10A
18	11.0248	BACK RUN FUSE 10A
19	11.0243	FRONT PANEL FUSE 10A
20	11.0243	FAN FUSE 20A

ITEM	PART CODE	DESCRIPTION
21	11.0243	STARTER SOLENOID FUSE 25A
22	11.0243	STARTER FUSE 20A
23	11.0037	TIMER + CONNECTOR OF HEAT LAMPS
24	11.0248	RETAINING SOLENOID FUSE 25A
25	11.0244	STOP FUSE 5A
26	11.0243	IGNITION LOCK FUSE 15A
27	11.0245	VALVE FUSE 15A
28	11.0248	REAR VIEW CAMERA FUSE 10A
29	11.0244	HEATER FUSE 15A
30	11.0248	FUEL INJECTION PUMP FUSE 15A
31	11.0248	PARKING HEATER FUSE 15A
32	11.0248	WEBASTO FUSE PARKING HEATER 10A
33	11.0068	IGNITION RELAY
34	11.0070	MARKER LIGHTS RELAY
35	11.0072	TURN INDICATOR RELAY
36	11.0072	STARTER RELAY

 MIMIC PANEL INSTALLATION (05.3400)

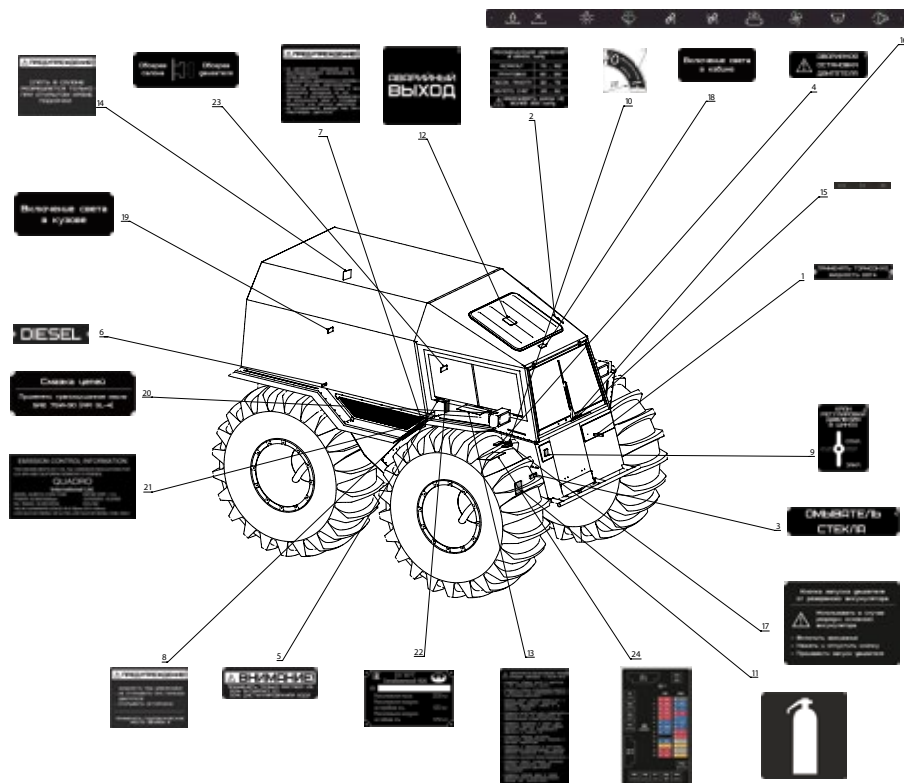

ITEM	PART CODE	DESCRIPTION
1	05.0492	BRAKE FLUID DOT 4 PLACARD
2	05.0493	RECOMMENDED TIRE PRESSURE PLACARD
3	05.0494	WINDOW WASHER PLACARD
4	05.0495	ENGINE EMERGENCY STOP PLACARD
5	05.0496	LIQUID COOLANT PLACARD
6	05.0497	DIESEL PLACARD
7	05.0498	FIRE PRECAUTION PLACARD
8	05.0499	PRESSURIZED FLUID PRECAUTION PLACARD
9	05.0500	TIRE BOOST CONTROL VALVE PLACARD
10	05.0501	BATTERY DISCONNECT SWITCH PLACARD
11	05.0502	FIRE EXTINGUISHER CYLINDER PLACARD
12	05.0503	EMERGENCY EXIT PLACARD
13	05.0507	PRE-DEPARTURE INSTRUCTIONS PLACARD
14	05.0506	INDICATION OF REST IN THE COMPARTMENT PLACARD
15	05.0504	SWITCH SYMBOL PLACARD
16	05.0505	SWITCH SYMBOL PLACARD
17	05.0508	ENGINE STARTING WITH RESERVED ACCUMULATOR PLACARD
18	05.0509	LIGHTING IN THE CAB TURN ON PLACARD
19	05.0510	LIGHTING IN THE BODY TURN ON PLACARD
20	05.0511	LUBRICATING CHAIN PLACARD

MIMIC PANEL INSTALLATION (05.3400)

ITEM	PART CODE	DESCRIPTION
21	05.0512	ENGINE SPECIFICATIONS PLACARD
22	05.0514	VIN CODE PLACARD
23	05.0515	PARKING HEATER CONTROL PLACARD
24	05.0513	RELAY AND FUSE LOCATION PLACARD

